

Legacy Installation Instructions



LEGACY	
SKU No.	Size
BVL-36	36
BVL-48	48
BVL-60	60


- Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us;

Call: (302)336-8180

Email: vanityinservice@gmail.com


- Protect all surfaces from sharp objects , high heat sources,direct prolonged sunlight and chemical hazards .

- Professional installation is recommended !


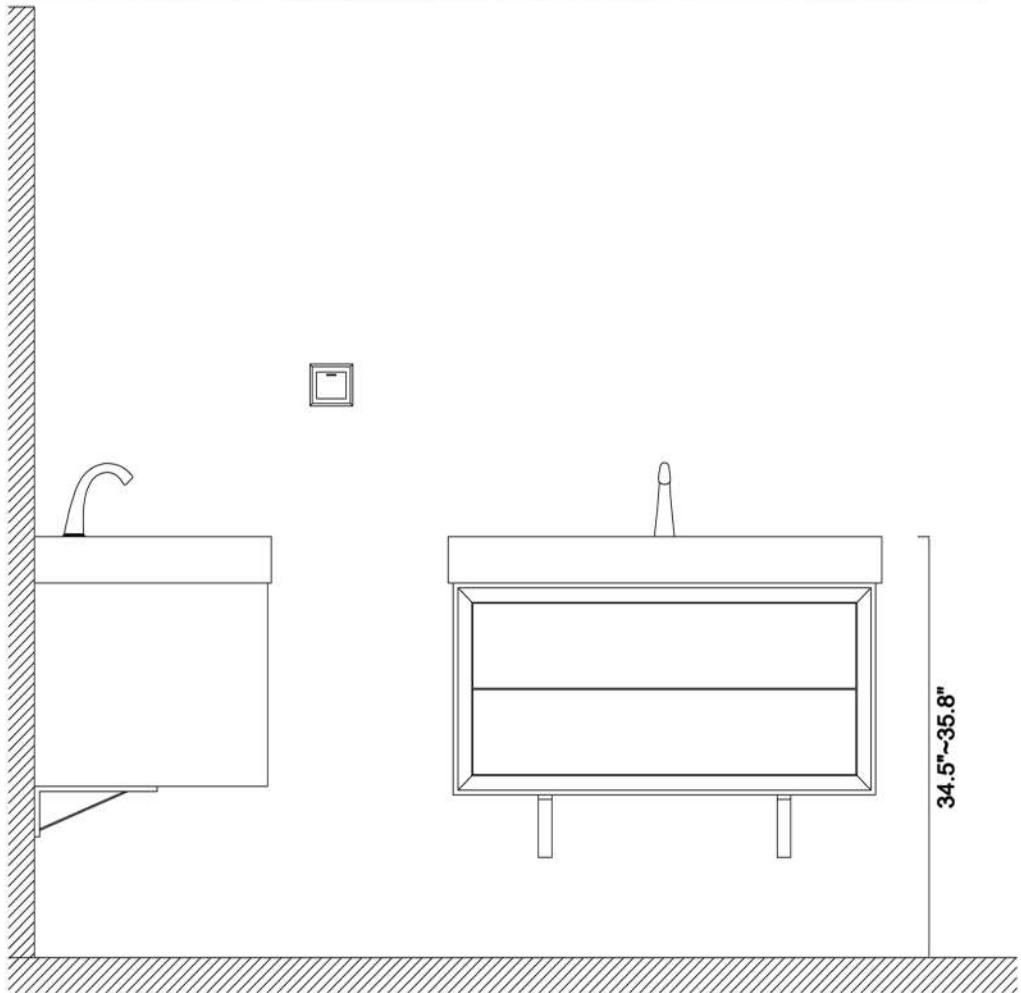


NOTE

1. Ceramic sink: cUPC certified. 
2. LED light :
 - a. The LED light is replaceable, if it is damaged, please contact us ;
Call: (302)336-8180
Email: vanityinservice@gmail.com
 - b. LED light should be connected to the wall switch for turning on/off.
 - c. UL certified & IP67 for water proof. 

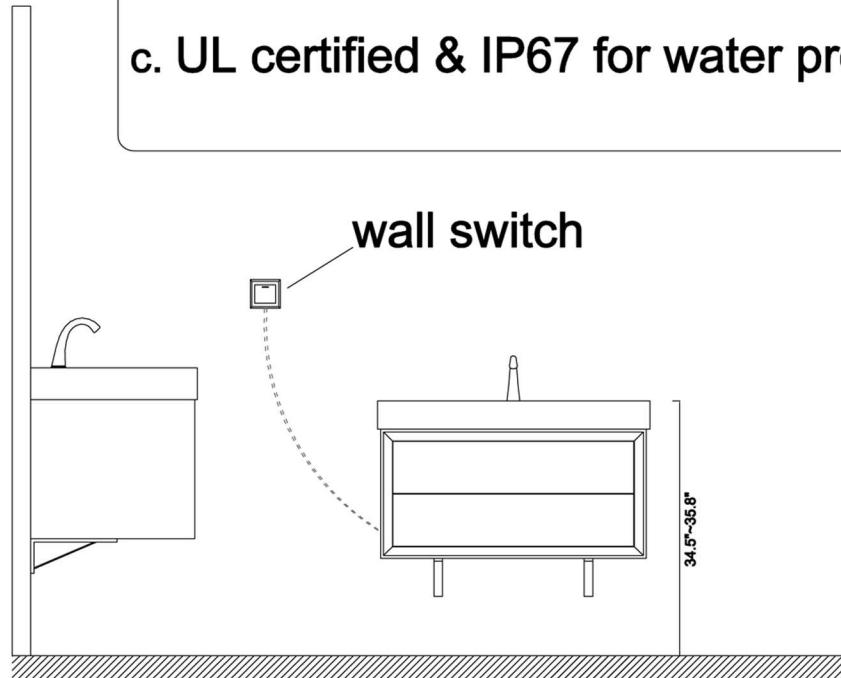


Marble top with ceramic sink

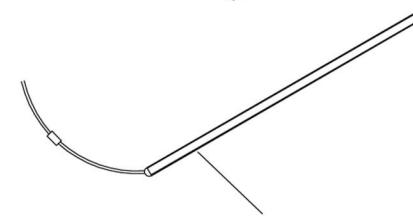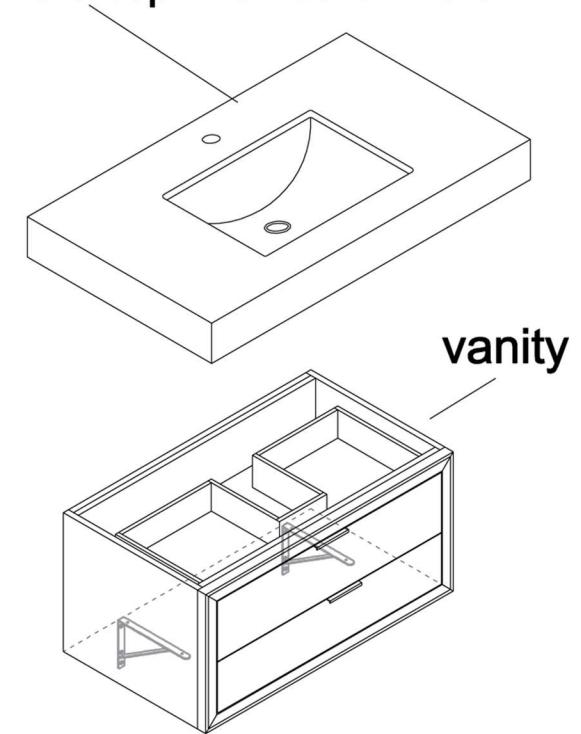


Provides infinite adjustability for customized brightness, and temperature can be infinitely adjusted from 3000K (Warm) to 6000K (Cold)

PACKING LIST

A Main Vanity
1 PC

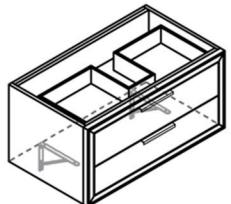


B Wood Cleat
1 PC

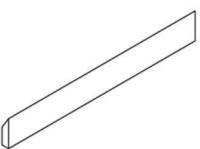

C Metal Bracket
2 PCS



D TOP
1 PC

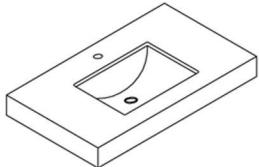

E Wood Screw
8 PCS



F Metal Bracket Screw
Handle Screw

36": 10pcs
48"S: 18pcs
48"D: 16pcs
60": 18pcs



G Wall Anchor
8 PCS




H Metal Washers
4 PCS




I Handle

36": 2x3pcs
48"S: 6x3pcs
48"D: 4x3pcs
60": 6x3pcs



TOOLS REQUIRED

Drill Bits

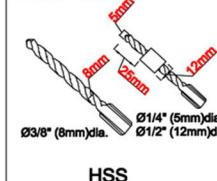

Screw Driver




Drill



Level



Knife



Glove



MASONRY DRILL BIT FOR
TILE Ø3/8" (8mm)



Safety Glasses



Silicone



Measuring Tape



Soft Head Hammer



Pencil



STEP 1: Use a wood stud finder to locate the wood studs behind the walls , and then mark by pencil.

Use a pencil to mark the installation location on the **Wood Cleat (B)** , according to the Wood stud's location.


Use a level to ensure the **Wood Cleat (B)** will be level before installing to the wall.

NOTE


Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because the dry wall cannot hold the cabinet.

vanity	hole	a	b	c
36"	3	12"	12"	-
48"	4	12"	12"	12"
60"	4	12"	24"	12"


NOTE: The a/b/c value is for reference only , please according to the Wood stud's location.

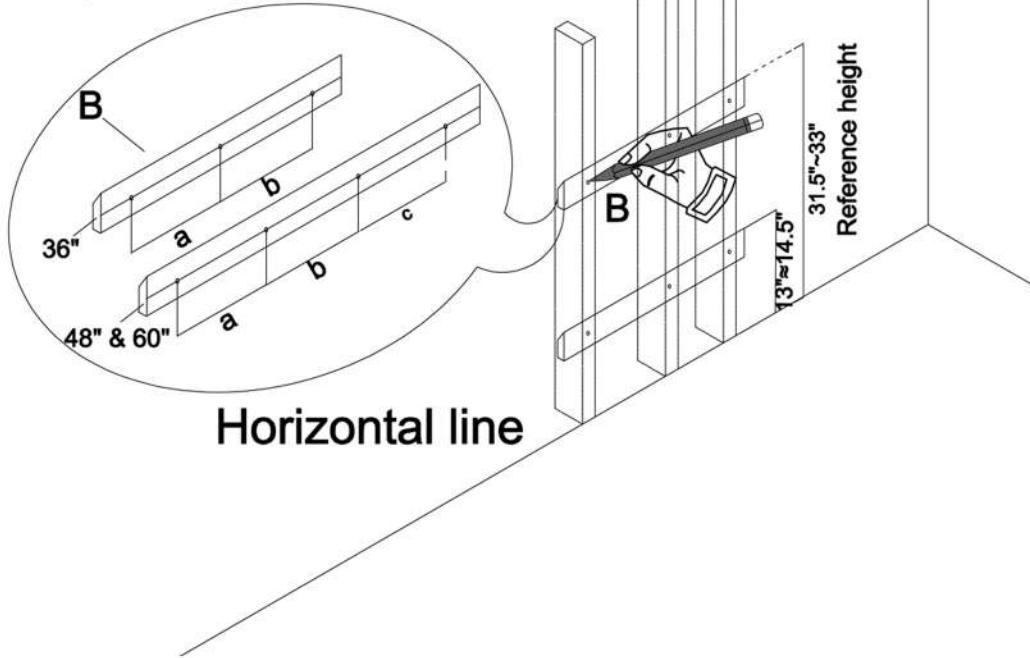


STEP 2: Drill the holes according to the marks using a drill.

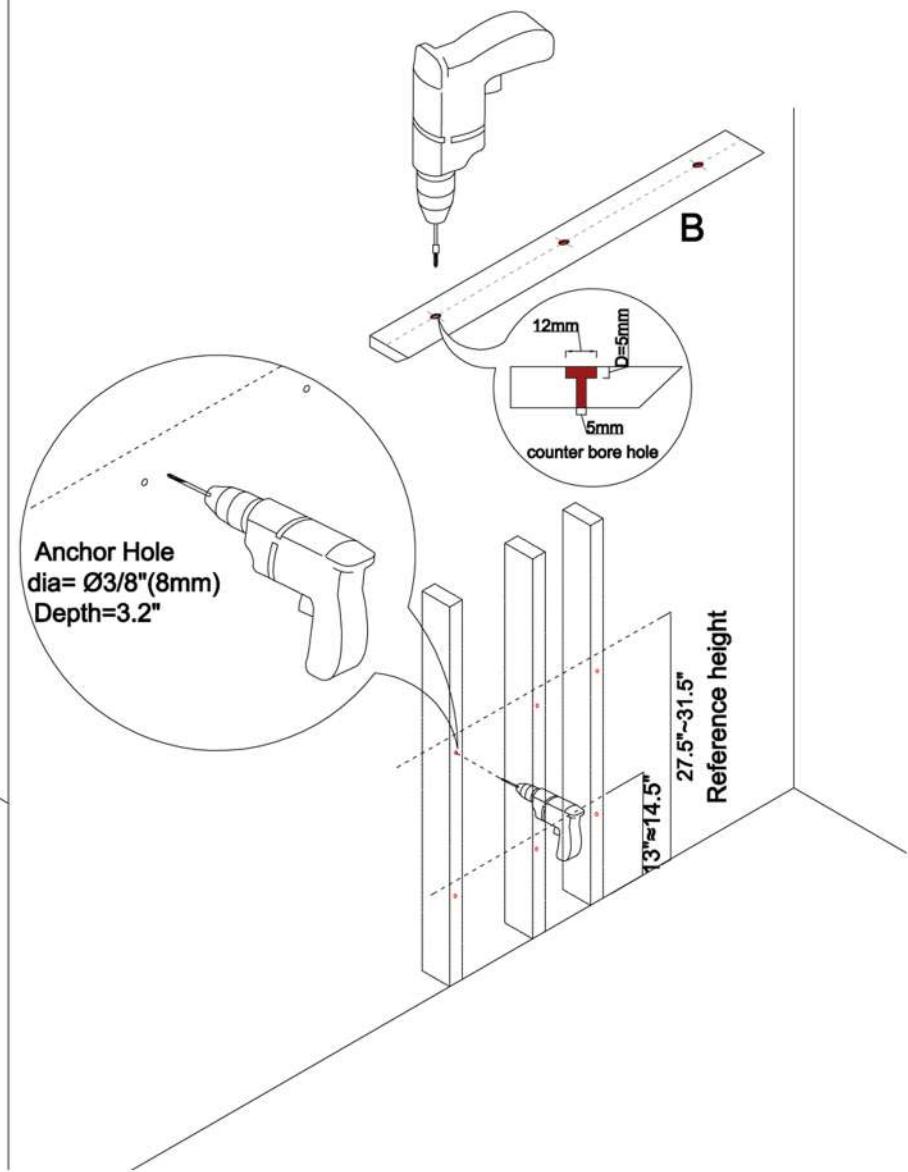


STEP 3: Install the **Wall Anchors (G)** provided into the wall with hammer.

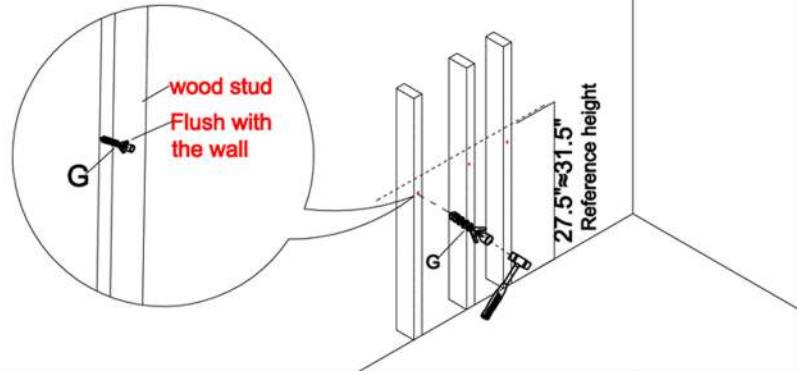


STEP 4: Install the **Wood cleat (B)** to the wood studs by screw driver.

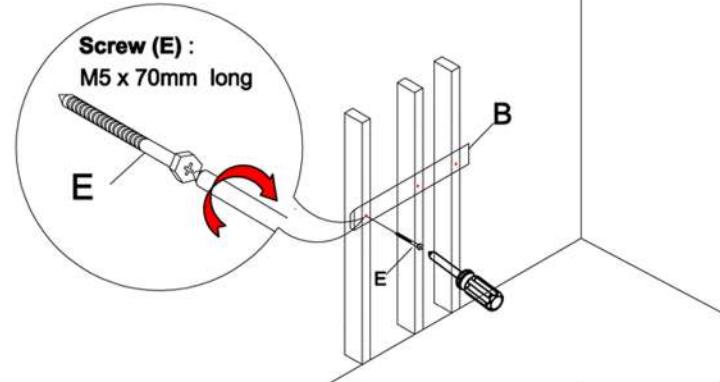


STEP 5: With help from another person, carefully hang the **Vanity (A)** onto the **Wood Cleat (B)**.

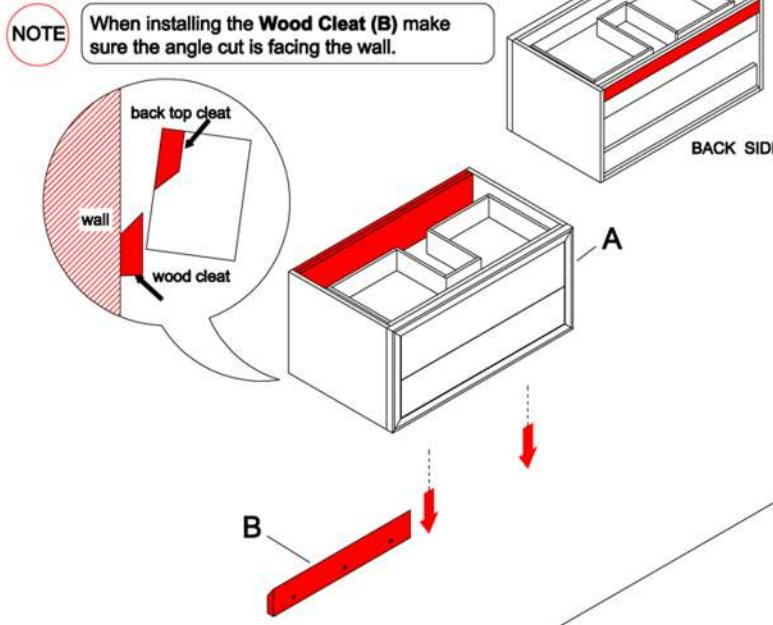


STEP 6: Using a pencil to mark the installation location for the **Metal Brackets (C)**.

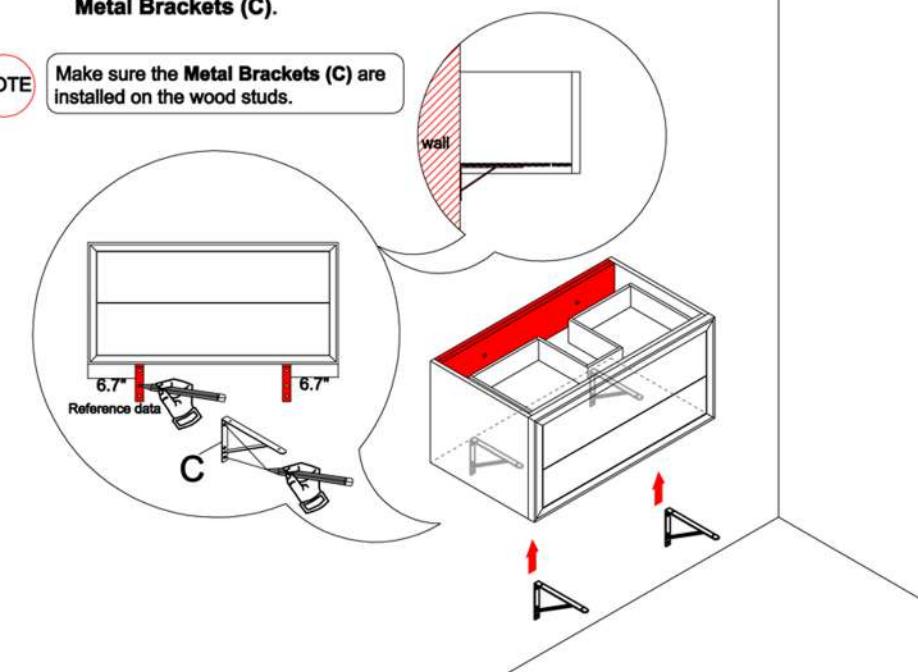


STEP 7: Carefully remove the **Vanity (A)** with the help from another person, and then drill the anchor holes according to the marks using a drill.

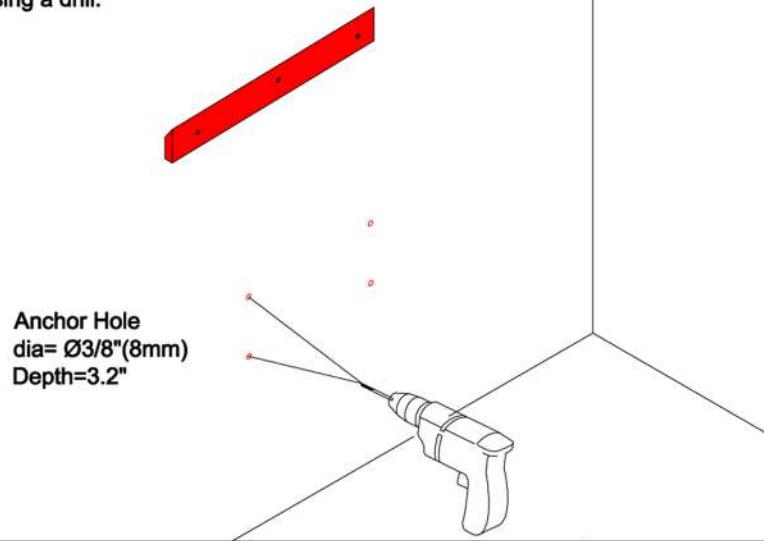


STEP 9: Install the **Metal Bracket (C)** to the wood studs by screw driver.

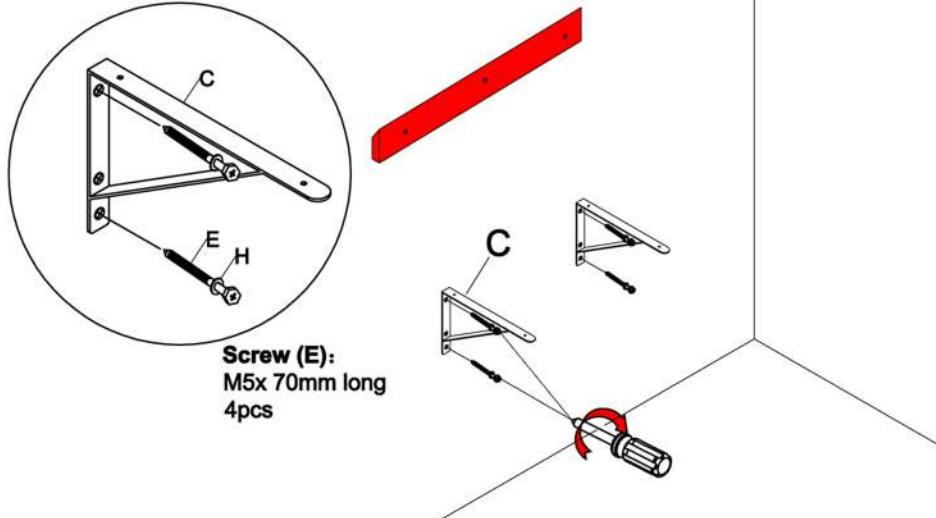


STEP 8: Install the **Wall Anchors (G)** provided into the wall with hammer.

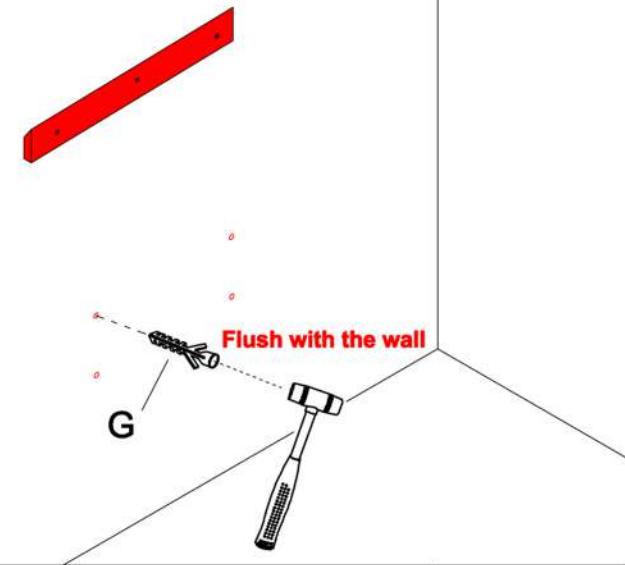


STEP 10: Hang the **Vanity (A)** to the wall and then connect the **Vanity (A)** to the **Wood Cleat (B)**.

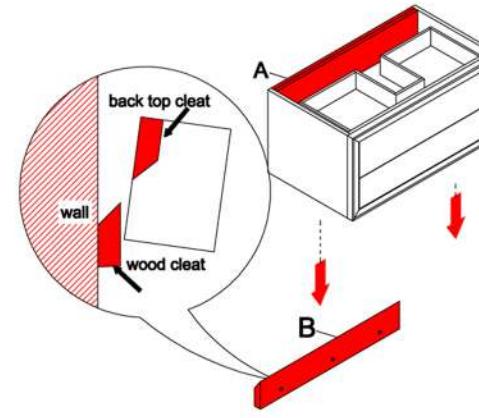


STEP 11: Connect the Metal Bracket (C) to the Vanity (A) with Screws (F).

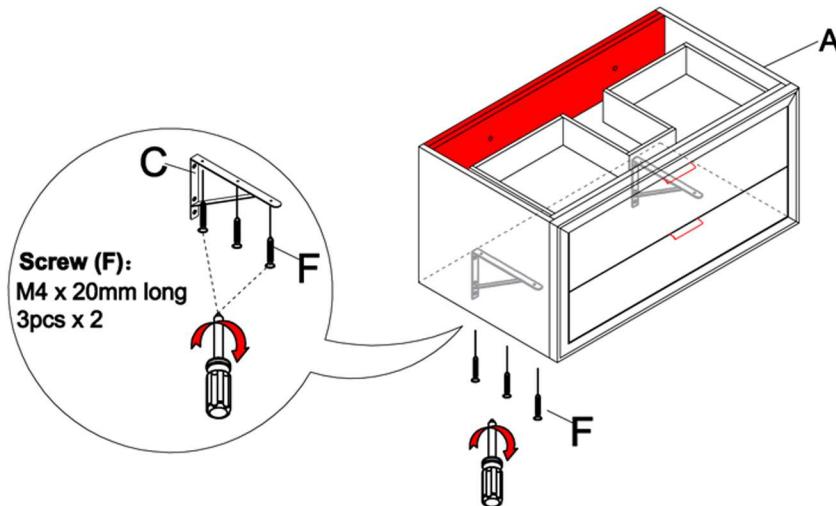


STEP 12: Connect the electrical wire to the wall switch for turning on/off.

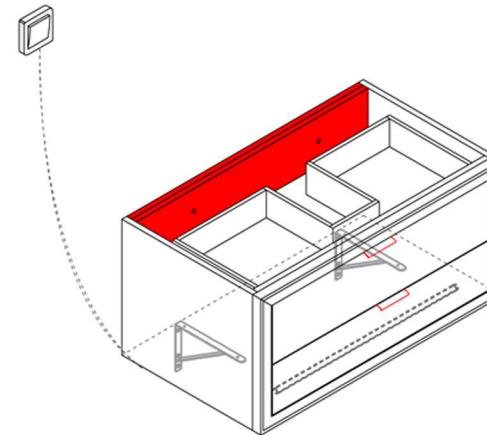

STEP 13: Apply the silicon to the top of the Vanity (A) and then install the Top (D) onto the Vanity (A) with the help from another person.

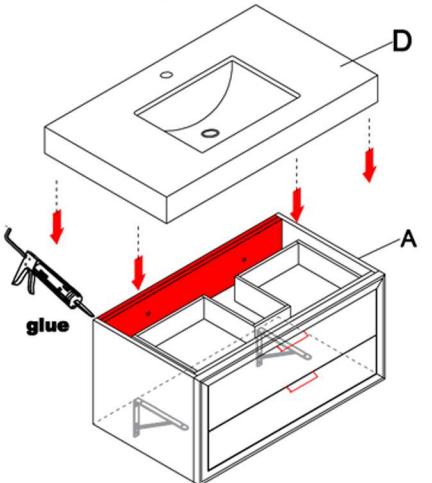

STEP 14: You can choose whether to replace other colors according to your preference

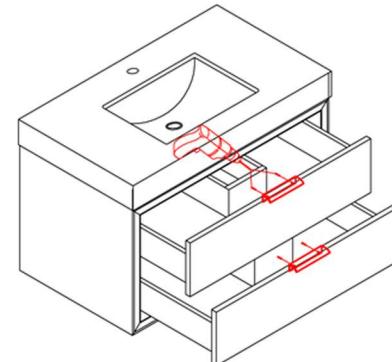

STEP 15: Let the vanity sit for 24 hours before use.

