

# Serenity Installation Instructions



SERENITY	
SKU No.	Size
BVS-36	36
BVS-48	48
BVS-60	60


- Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us;

Call: 800-498-4042

Email: [info@bellousa.com](mailto:info@bellousa.com)




- Protect all surfaces from sharp objects , high heat sources,direct prolonged sunlight and chemical hazards .

- Professional installation is recommended !

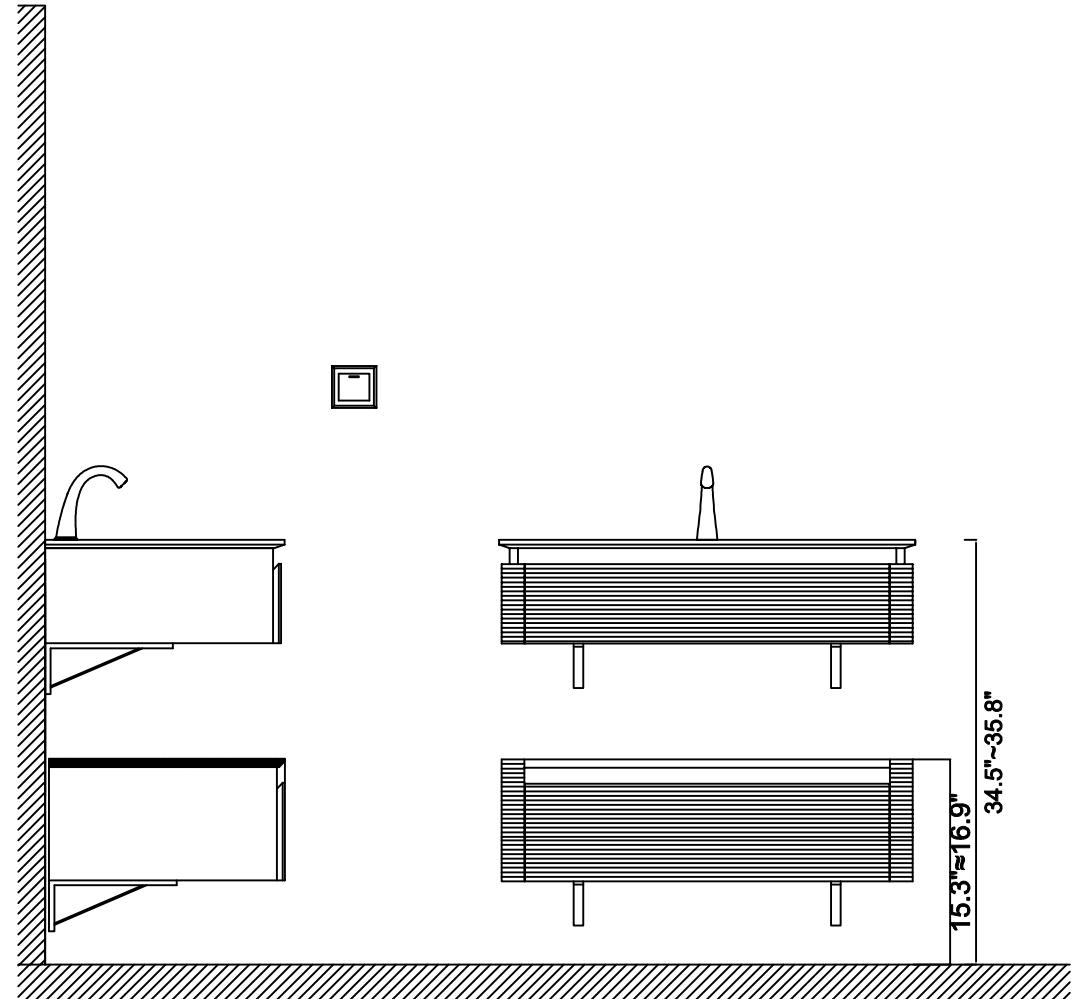

## NOTE

1. Ceramic sink: cUPC certified. 
2. LED light :
  - a. The LED light is replaceable, if it is damaged, please contact us ;  
Call: (302)336-8180  
Email: vanityinservice@gmail.com
  - b. LED light should be connected to the wall switch for turning on/off.
  - c. UL certified & IP67 for water proof. 

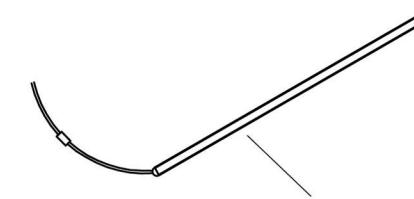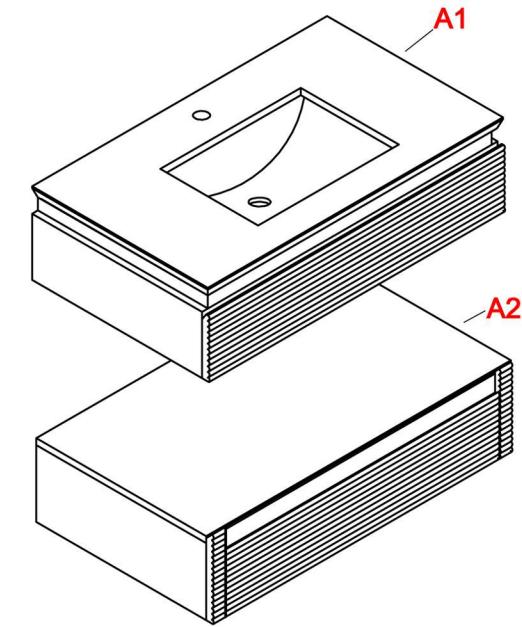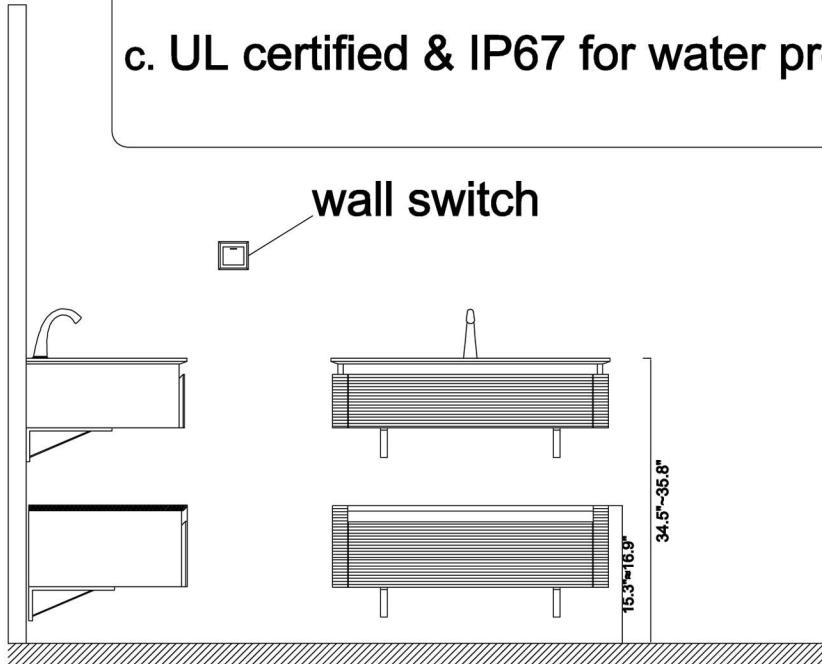


LED light


Provides infinite adjustability for customized brightness, and temperature can be infinitely adjusted from 3000K (Warm) to 6000K (Cold)

# PACKING LIST


**A** Main Vanity  
1 PC

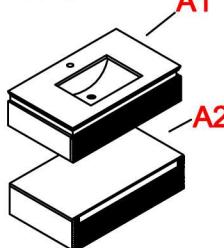


**B** Wood Cleat  
2 PC

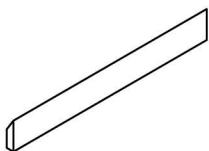

**C** Metal Bracket  
4 PCS

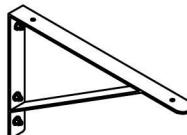


**D** Wood Screw  
6 PCS

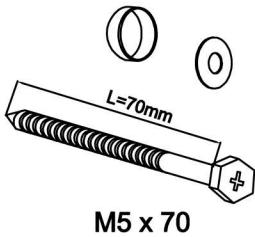

**E** Wood Screw  
16 PCS



**F** Wood Screw  
8 PCS

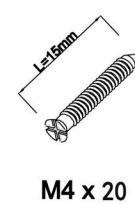


**G** Wall Anchor  
6 PCS



# TOOLS REQUIRED

**Drill Bits**

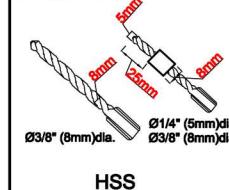

**Screw Driver**




**Drill**



**Level**



**Knife**

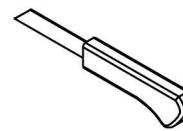

**Glove**



**MASONRY DRILL BIT FOR TILE Ø3/8" (8mm)**



**Safety Glasses**



**Silicone**



**Measuring Tape**



**Soft Head Hammer**



**Pencil**




- STEP 1:**
- Use a wood stud finder to locate the wood studs behind the walls , and then mark by pencil.
  - Use a pencil to mark the installation location on the **Wood Cleat (B)** , according to the Wood stud's location.
  - Use a level to ensure the **Wood Cleat (B)** will be level before installing to the wall.

**NOTE**


Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because the dry wall cannot hold the cabinet.

vanity	hole	a	b	c
36"	3	12"	12"	-
48"	4	12"	12"	12"
60"	4	12"	24"	12"


NOTE: The a/b/c value is for reference only , please according to the Wood stud's location.

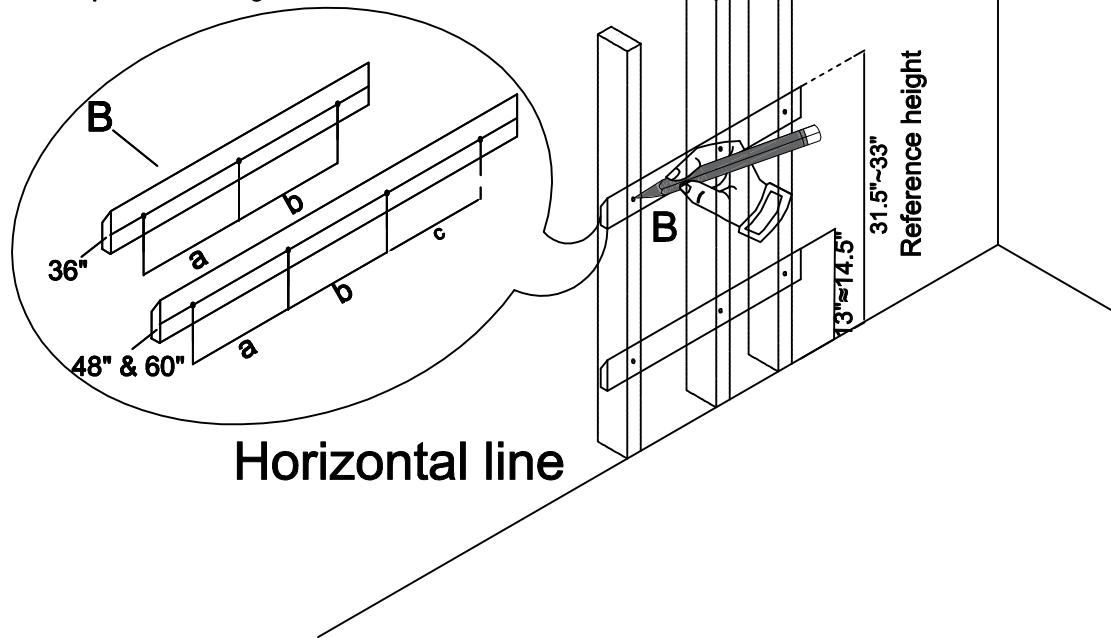


- STEP 2:** Drill the holes according to the marks using a drill.

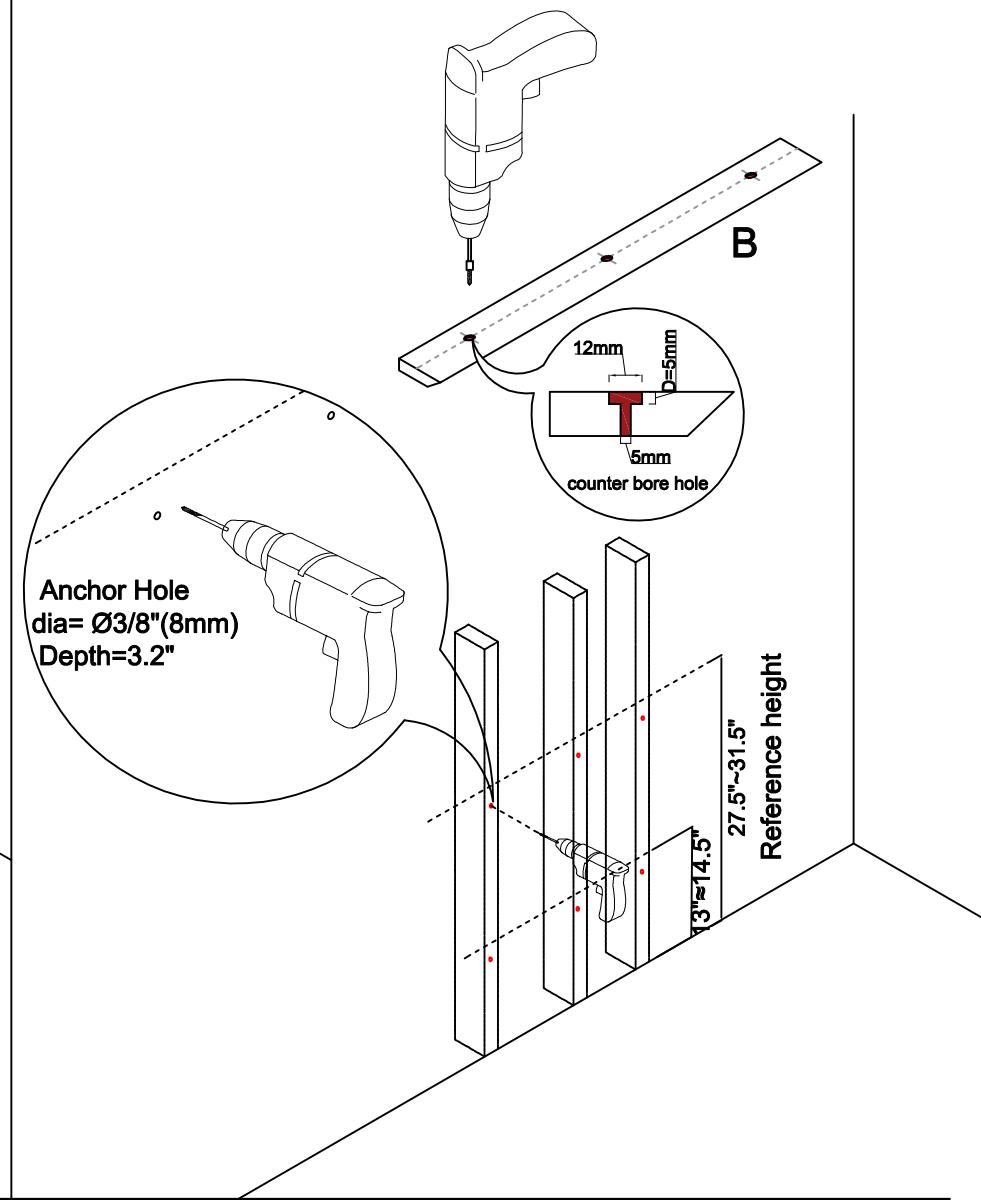

STEP 3: Install the Wall Anchors (F) provided into the wall with hammer.

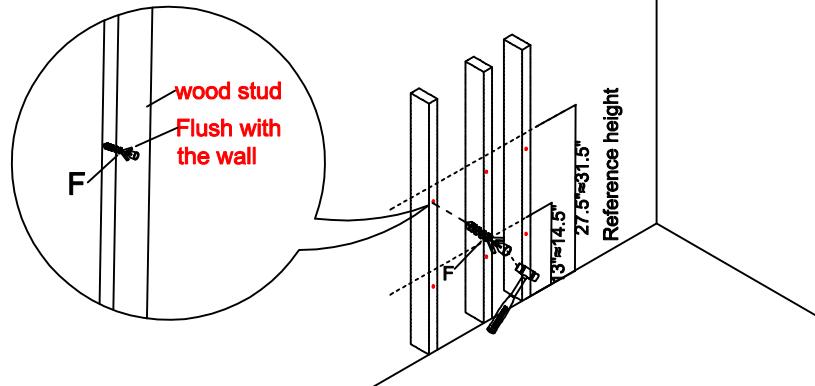


STEP 4: Install the Wood cleat (B) to the wood studs by screw driver.

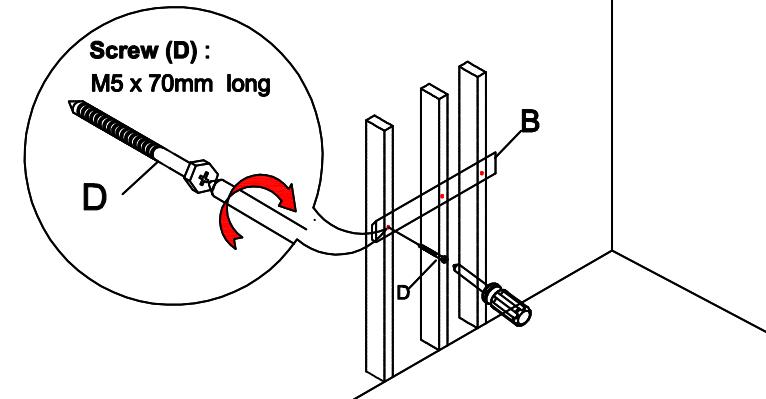


STEP 5: With help from another person, carefully hang the Vanity (A) onto the Wood Cleat (B).

**NOTE** When installing the Wood Cleat (B) make sure the angle cut is facing the wall.

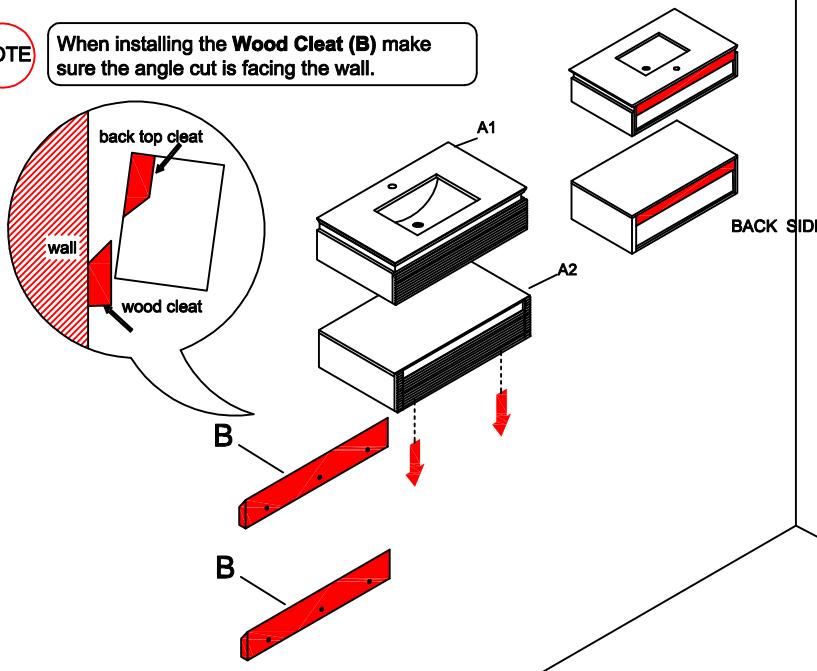


STEP 6: Using a pencil to mark the installation location for the Metal Brackets (C).


**NOTE** Make sure the Metal Brackets (C) are installed on the wood studs.

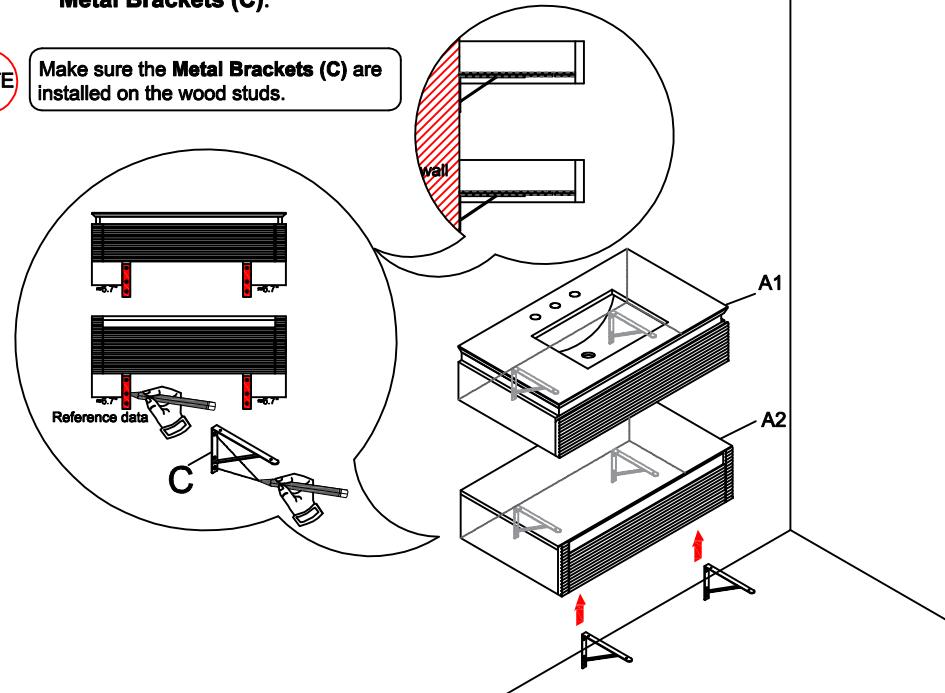


**STEP 7:** Carefully remove the **Vanity (A)** with the help from another person, and then drill the anchor holes according to the marks using a drill.

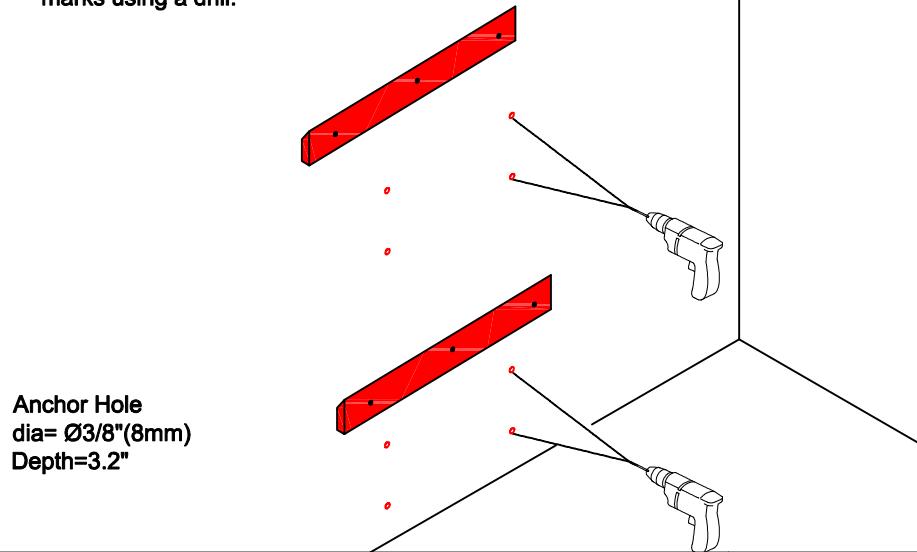


**STEP 8:** Install the **Wall Anchors (F)** provided into the wall with hammer.

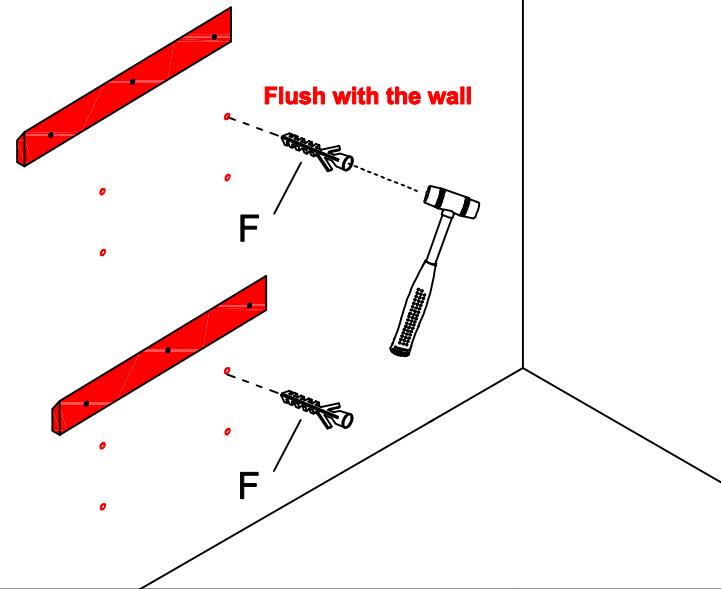


**STEP 9:** Install the **Metal Bracket (C)** to the wood studs by screw driver.

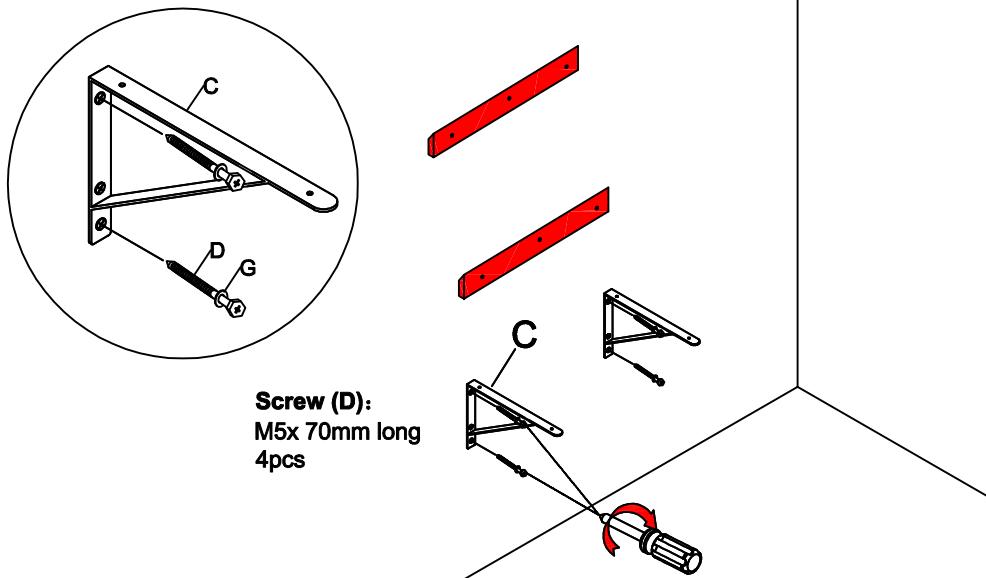


**STEP 10:** Hang the **Vanity (A)** to the wall and then connect the **Vanity (A)** to the **Wood Cleat (B)**.

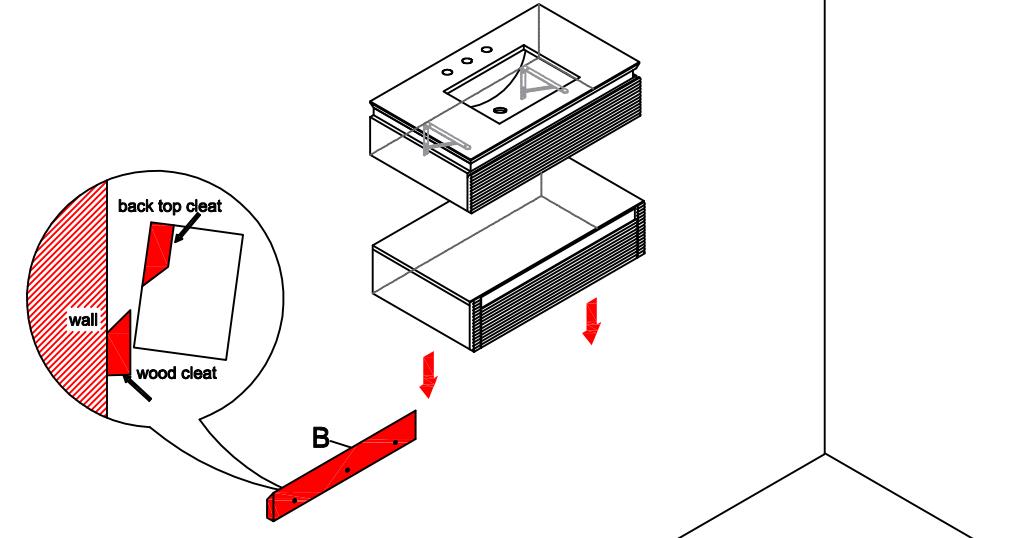


STEP 11: Connect the Metal Bracket (C) to the Vanity (A) with Screws (E).

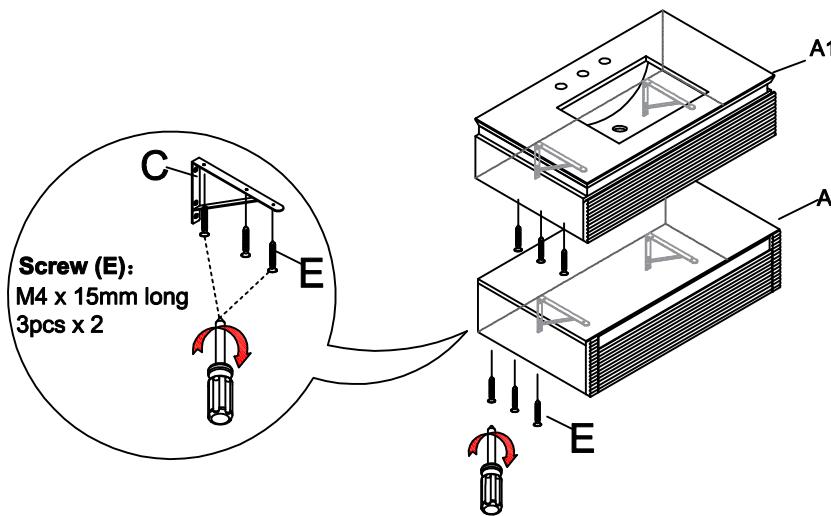

STEP 12: Connect the electrical wire to the wall switch for turning on/off.

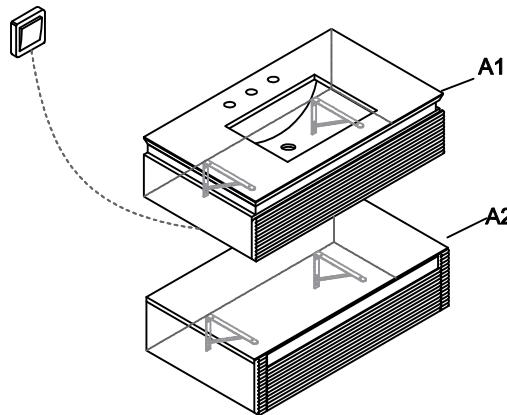

STEP 13: Let the vanity sit for 24 hours before use.

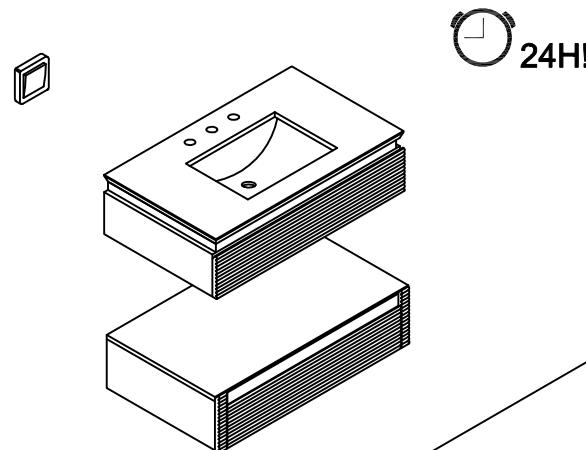

Before returning to store, call us at 800-498-4042 or contact us by e-mail at [info@bellousa.com](mailto:info@bellousa.com)